 


Seda

NOVAH[®]

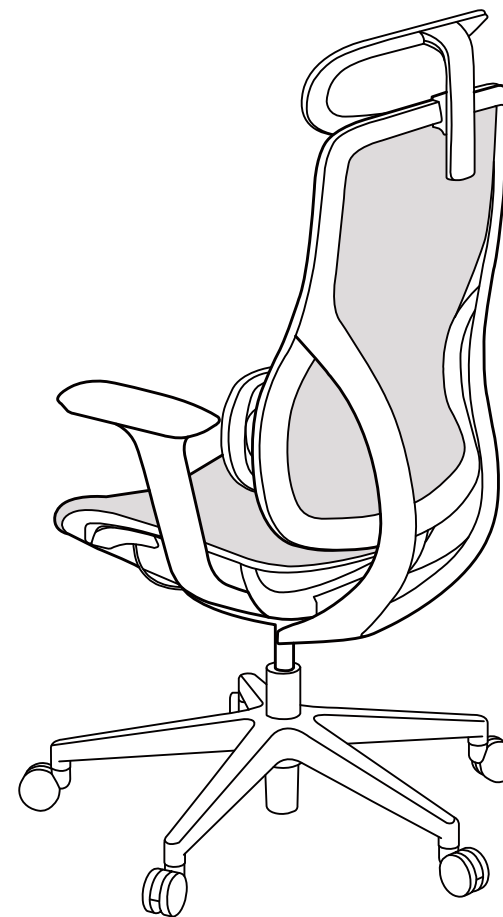

 
NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH[®]


Product Parts List




1X

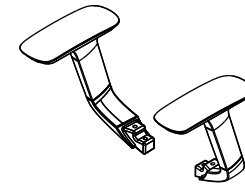


1X

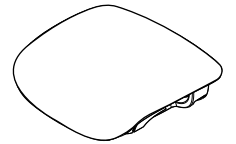 


1X

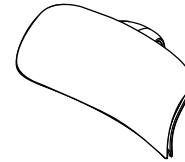 

1X

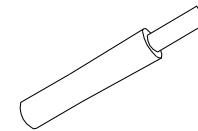 


1X

 


1X



 
2X



4X

 

2X

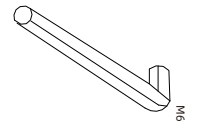 


1X



3X



 
3X

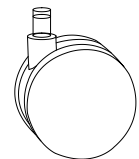

5X


Step 1

 Insert the casters into the five-star feet successively

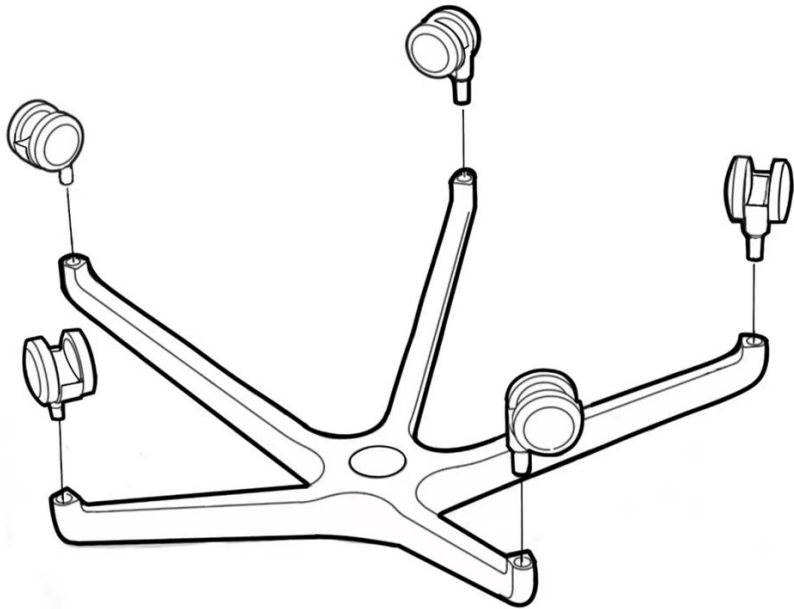




Step 2

 Place the air pressure rod into the center of the chair feet

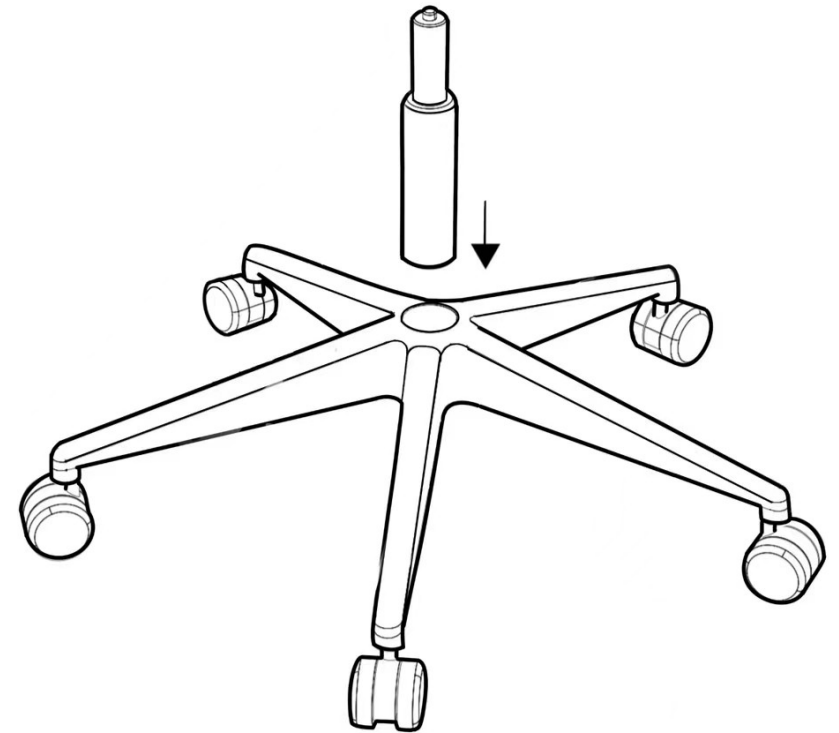


Step 3

   Install the backrest to the base

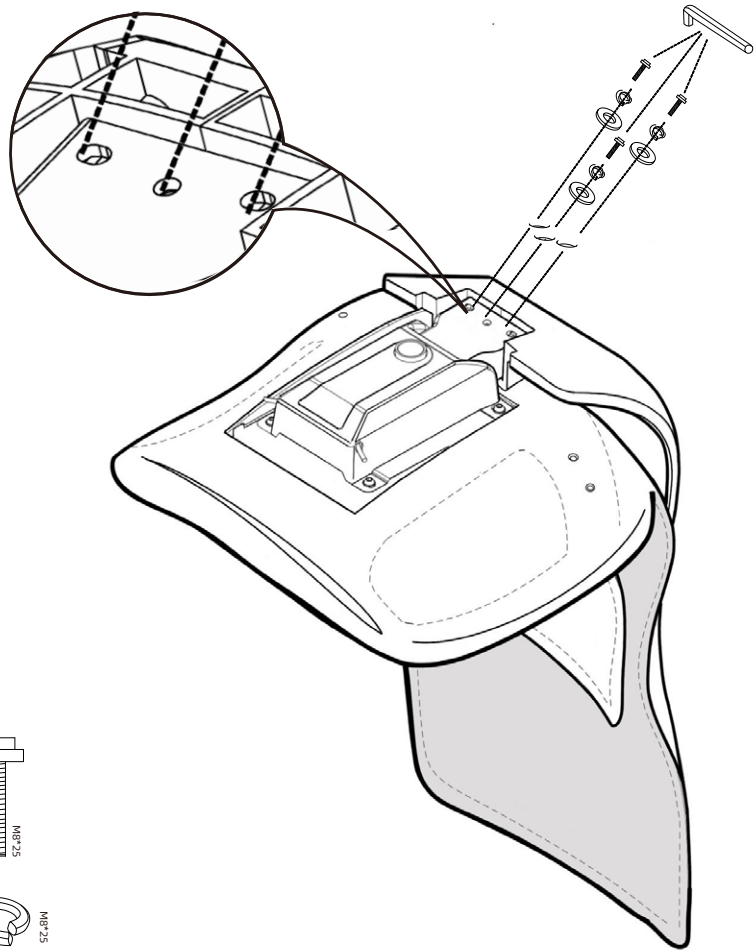


Step 4

 Align the upper half of the assembled seat with the center of the air pressure axis and insert

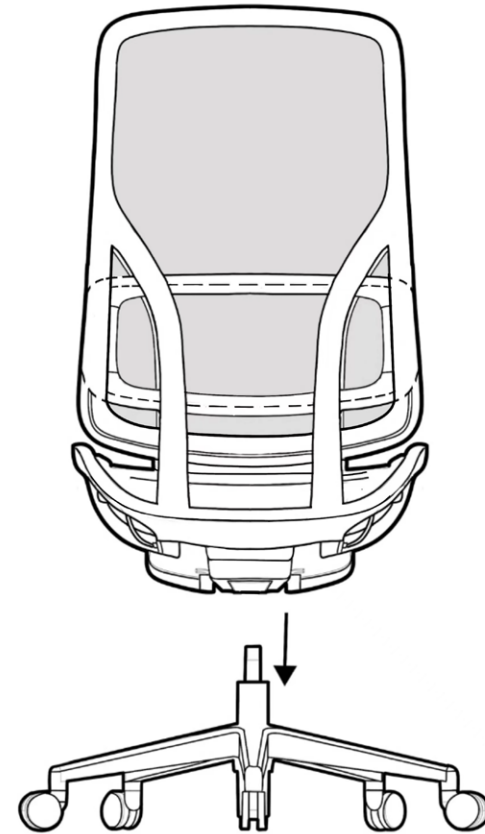


Step 5

 Fasten the armrests to the chair frame



Step 6

 Secure the headrest to the seat back



Step 7

The installation is complete

