

SEDA


Guide Book





Headrest Adjustment:

The headrest's lowest position activates the locking feature; its highest point enables unlocking. When the locking function is engaged, pull the headrest upwards to raise it. Once lifted to its maximum height, the unlocking feature is activated. After unlocking, you can lower the headrest by pulling it downwards. Lowering it to its minimum height will re-engage the locking function.

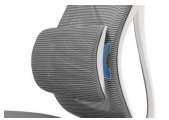


Lumber Height:

Simultaneously raise or lower both sides of the lumbar support with both hands to adjust its height.


Seat height adjustment:

Adjust the seat height by pulling the adjustment lever outward.

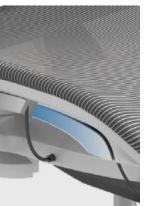

Seat depth adjustment:

Adjust the seat depth by pulling out or pushing in the adjustment button.

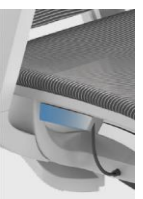


Armrest Adjustment:

- Adjust armrest height by lifting the control lever upwards.
- Slide the armrest forward or backward to change its horizontal position.
- Rotate the armrest left or right to modify its angle.



Tension Control:

To lock the tilt function, pull out the button. To unlock it, simply pull the button out again.

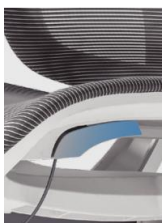


5D armrest adjustment:

Press the button to adjust the height upwards, move the armrest surface forward and backward with a 40mm range, and rotate the metal component to adjust the entire armrest 360° for optimal support.


Seat height adjustment:

Adjust the seat height by pulling the adjustment lever outward.

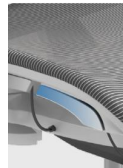

Seat depth adjustment:

Adjust the seat depth by pulling out or pushing in the adjustment button.

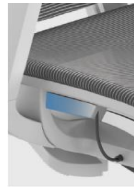


Headrest Adjustment:

The headrest's lowest position activates the locking feature; its highest point enables unlocking. When the locking function is engaged, pull the headrest upwards to raise it. Once lifted to its maximum height, the unlocking feature is activated. After unlocking, you can lower the headrest by pulling it downwards. Lowering it to its minimum height will re-engage the locking function.




Lumber Height:

Simultaneously raise or lower both sides of the lumbar support with both hands to adjust its height.

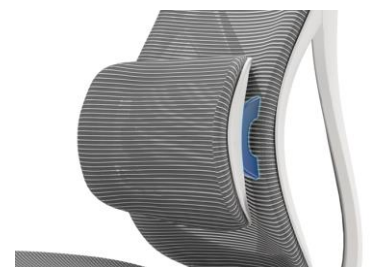

Tension Control:

To lock the tilt function, pull out the button. To unlock it, simply pull the button out again.

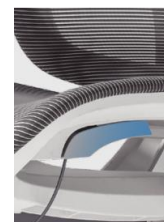

Footrest adjustment :

Pull the handle forward to engage, extending up to 435mm for a more comfortable reclining position.

